

Operation Manual for ETL-01

Features:

- Manager plus one user code
- Capable of a management reset code (emergency code)
- Wrong entry penalty
- Low battery alert
- One 9V alkaline battery power supply
- Audio signal and standby status

1. The lock can be opened by the management code, the user code and the emergency code.

- The factory management setting is 1234 #
- User and emergency setting is 12345678 #

2. How to modify the management code or user code

2.1. How to change the management code

After entering the old management code (1-4 digits), then pressing "#" key, the green LED will light. In the meantime, press "*" key, the yellow light will go on. If there is no any entry within eight seconds, the system will cancel the changing operation and go back to the standby status. While the yellow light is on, input a new management code, then press "*" key to confirm it. If you hear three beeps of the buzzer, that means you change it successfully. If not, you should try it again.

2.2. How to change the user code

After entering the old code (1-8 digits), then pressing "#" key, the green LED will light. In the meantime, press "*" key, the yellow light will go on. If there is no any entry within eight seconds, the system will cancel the changing operation and go back to the standby status. While the yellow light is on, input a new management code, then press "*" key to confirm it. If you hear three beeps, that means you change it successfully. If not, you should try it again.

3. How to change the emergency code

After entering the management code or user code, then pressing the "#" key, the green LED will light, and the door are in opening state, in the meantime, press the "#" key twice constantly. The yellow LED will go on. While the yellow LED is on, you should input the new code within eight seconds, then press the "*" key to confirm it. When you hear three beeps, and the yellow LED goes off, that indicates that you change the code successfully. If

not you should try it again.

4. How to open the safe

4.1 How to open with the management code or the user code

Input the right management code or user code, then press "#", after that the green LED will light. Then you can turn the handle to open the safe. If you input the wrong code three times in a row, the keypad will be locked for one minute.

4.2. How to open the safe with the emergency code

At first press "#" key twice, then the yellow LED will light. While the yellow LED is on, enter the emergency code, then press the "#" key, when you hear two beeps, the green LED will light. Now you can turn the handle to open the safe. The lock will be beep opening state for five seconds. Then green LED goes off. If you hear four beeps, and the green LED does no light, it means that you fail to open it. Please try it again. If you input the wrong code three times in a row, the keypad will be locked for one minute.

5. If you open the safe with the emergency code, the management code and user code will go back the factory default.

6. If you enter wrong code four times in a row, the yellow LED lights, and the buzzer will beep for one minute.

7. Low power alert

In opening state, if you find that the red LED lights, it indicates that the voltage is low. You need to change a battery as soon as possible.

8. How to change battery

The battery is located under the chrome casing of the lock. To change battery press and hold the lock pin which is situated at the bottom of the plastic part of the lock. Then carefully turn the chrome casing to the left and still keep pressed the pin. After that the chrome casing should be released.